

Manual of Petroleum Measurement Standards Chapter 10—Sediment and Water

Section 8—Standard Test Method for Sediment in Crude Oil by Membrane Filtration

SECOND EDITION, NOVEMBER 2005

REAFFIRMED, MARCH 2010



AMERICAN PETROLEUM INSTITUTE

Manual of Petroleum Measurement Standards Chapter 10—Sediment and Water

Section 5—Standard Test Method for Sediment in Crude Oil by Membrane Filtration

Measurement Coordination

SECOND EDITION, NOVEMBER 2005

REAFFIRMED, MARCH 2010



AMERICAN PETROLEUM INSTITUTE

SPECIAL NOTES

API publications necessarily address problems of a general nature. With respect to particular circumstances, local, state, and federal laws and regulations should be reviewed.

Neither API nor any of API's employees, subcontractors, consultants, committees, or other assignees make any warranty or representation, either express or implied, with respect to the accuracy, completeness, or usefulness of the information contained herein, or assume any liability or responsibility for any use, or the results of such use, of any information or process disclosed in this publication. Neither API nor any of API's employees, subcontractors, consultants, or other assignees represent that use of this publication would not infringe upon privately owned rights.

API publications may be used by anyone desiring to do so. This publication is an updated version of *MPMS* Chapter 10.8. Previous editions of this publication were numbered *MPMS* Chapter 10.8. Users of this standard should take efforts to ensure they are using the most current version of this publication. Every effort has been made by the Institute to assure the accuracy and reliability of the data contained in them; however, the Institute makes no representation, warranty, or guarantee in connection with this publication and hereby expressly disclaims any liability or responsibility for loss or damage resulting from its use or for the violation of any authorities having jurisdiction with which this publication may conflict.

API publications are published to facilitate the broad availability of proven, sound engineering and operating practices. These publications are not intended to obviate the need for applying sound engineering judgment regarding when and where these publications should be utilized. The formulation and publication of API publications is not intended in any way to inhibit anyone from using any other practices.

Any manufacturer marking equipment or materials in conformance with the marking requirements of an API standard is solely responsible for complying with all the applicable requirements of that standard. API does not represent, warrant, or guarantee that such products do in fact conform to the applicable API standard.

All rights reserved. No part of this work may be reproduced, stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission from the publisher. Contact the Publisher, API Publishing Services, 1220 L Street, N.W., Washington, D.C. 20005.

Copyright © 2005 American Petroleum Institute

FOREWORD

Nothing contained in any API publication is to be construed as granting any right, by implication or otherwise, for the manufacture, sale, or use of any method, apparatus, or product covered by letters patent. Neither should anything contained in the publication be construed as insuring anyone against liability for infringement of letters patent.

This document was produced under API standardization procedures that ensure appropriate notification and participation in the developmental process and is designated as an API standard. Questions concerning the interpretation of the content of this publication or comments and questions concerning the procedures under which this publication was developed should be directed in writing to the Director of Standards, American Petroleum Institute, 1220 L Street, N.W., Washington, D.C. 20005. Requests for permission to reproduce or translate all or any part of the material published herein should also be addressed to the director.

Generally, API standards are reviewed and revised, reaffirmed, or withdrawn at least every five years. A one-time extension of up to two years may be added to this review cycle. Status of the publication can be ascertained from the API Standards Department, telephone (202) 682-8000. A catalog of API publications and materials is published annually and updated quarterly by API, 1220 L Street, N.W., Washington, D.C. 20005.

Suggested revisions are invited and should be submitted to the Standards and Publications Department, API, 1220 L Street, NW, Washington, DC 20005, standards@api.org.

CONTENTS

	Page
1. SCOPE	1
2. REFERENCED DOCUMENTS	1
2.1 ASTM Standards	1
2.2 API Standards	1
2.3 ISO Standard	1
3. SUMMARY OF TEST METHOD.....	1
4. SIGNIFICANCE AND USE	1
5. APPARATUS.....	2
6. REAGENTS	2
7. SAMPLING, TEST SPECIMENS	2
8. PROCEDURE	3
9. CALCULATION.....	3
10. REPORT.....	3
11. PRECISION AND BIAS.....	4
12. KEYWORDS	4
ANNEX A1. SAFETY PRECAUTIONS TO AVOID STATIC DISCHARGE	4
SUMMARY OF CHANGES	5
Figure	
1 Membrane Filtration Assembly	2
Table	
1 Precision Intervals	4



Standard Test Method for Sediment in Crude Oil by Membrane Filtration¹

This standard is issued under the fixed designation D 4807; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ε) indicates an editorial change since the last revision or reapproval.

This standard has been approved for use by agencies of the Department of Defense.

ε¹ NOTE—Footnote 5 was updated editorially in August 2005.

1. Scope*

1.1 This test method covers the determination of sediment in crude oils by membrane filtration. This test method has been validated for crude oils with sediments up to approximately 0.15 mass %.

1.2 The accepted unit of measure for this test method is mass %, but an equation to convert to volume % is provided (see [Note 6](#)).

1.3 The values stated in SI units are to be regarded as the standard. The values given in parentheses are for information only.

1.4 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.* For specific warning statements, see [6.1](#) and [Annex A1](#).

2. Referenced Documents

2.1 ASTM Standards:²

[D 473](#) Test Method for Sediment in Crude Oils and Fuel Oils by the Extraction Method (API [MPMS Chapter 10.1](#))

[D 4057](#) Practice for Manual Sampling of Petroleum and Petroleum Products (API [MPMS Chapter 8.1](#))

[D 4177](#) Practice for Automatic Sampling of Petroleum and Petroleum Products (API [MPMS Chapter 8.2](#))

[D 4865](#) Guide for Generation and Dissipation of Static Electricity in Petroleum Fuel Systems

[D 5854](#) Practice for Mixing and Handling of Liquid Samples of Petroleum and Petroleum Products (API [MPMS Chapter 8.3](#))

2.2 API Standards:³

[MPMS Chapter 8.1](#) Manual Sampling of Petroleum and Petroleum Products (ASTM Practice [D 4057](#))

[MPMS Chapter 8.2](#) Automatic Sampling of Petroleum and Petroleum Products (ASTM Practice [D 4177](#))

[MPMS Chapter 8.3](#) Mixing and Handling of Liquid Samples of Petroleum and Petroleum Products (ASTM Practice [D 5854](#))

[MPMS Chapter 10.1](#) Test Method for Sediment in Crude Oils and Fuel Oils by the Extraction Method (ASTM Test Method [D 473](#))

2.3 ISO Standard:⁴

[ISO 5272:1979](#) Toluene for Industrial Use—Specifications

3. Summary of Test Method

3.1 A portion of a representative crude oil sample is dissolved in hot toluene and filtered under vacuum through a 0.45-μm porosity membrane filter. The filter with residue is washed, dried, and weighed to give the final result.

4. Significance and Use

4.1 A knowledge of the sediment content of crude oil is important both in refinery operations and in crude oil commerce.

¹ This test method is under the jurisdiction of ASTM Committee D02 on Petroleum Products and Lubricants and the API Committee on Petroleum Measurement, and is the direct responsibility of Subcommittee D02.02/COMQ, the joint ASTM-API committee on Static Petroleum Measurement. This test method has been approved by the sponsoring committee and accepted by the Cooperating Societies in accordance with established procedures.

Current edition approved June 1, 2005. Published September 2005. Originally approved in 1988. Last previous edition approved in 1999 as D 4807–88(1999).

² For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

³ Published as *Manual of Petroleum Measurement Standards*. Available from the American Petroleum Institute (API), 1220 L St., NW, Washington DC 20005.

⁴ Available from American National Standards Institute (ANSI), 25 W. 43rd St., 4th Floor, New York, NY 10036.

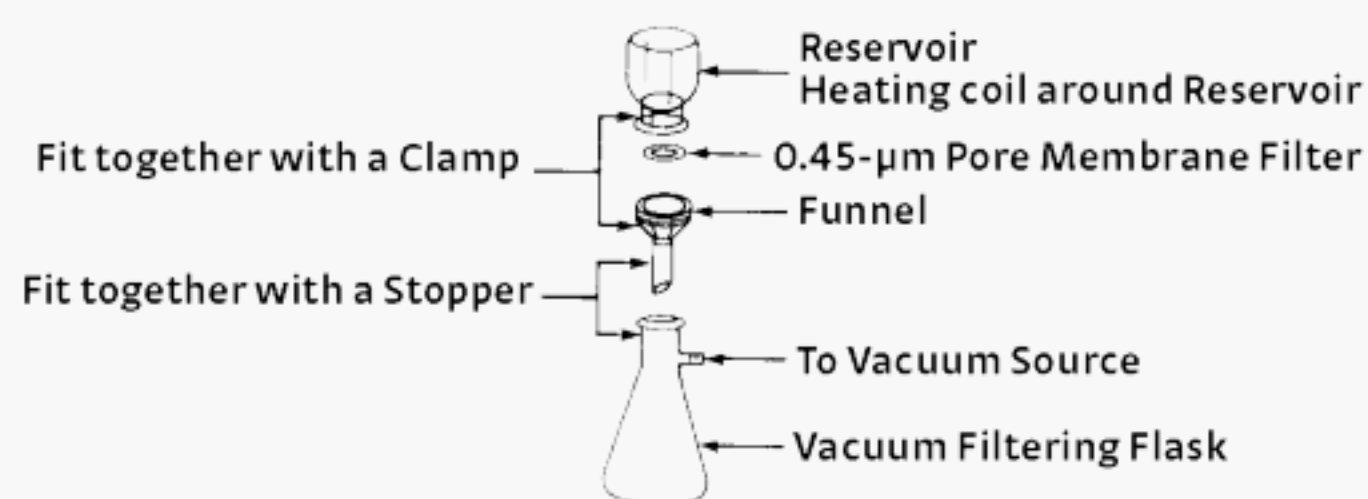


FIG. 1 Membrane Filtration Assembly

5. Apparatus

5.1 *Funnel and Filter Support Assembly*—Use an assembly designed to hold 47-mm diameter filters as was used in the development of this test method (see Fig. 1).⁵

5.1.1 *Filter Funnel*—Use a filter funnel with a 250 mL minimum capacity. The lower part of the funnel has a 40-mm inside diameter and is designed to secure the 47-mm diameter filter against the filter support. The funnel can be jacketed to facilitate heating the solvent funnel and sample during filtering.

NOTE 1—Use of a glass funnel should minimize the effect of static electricity when filtering.

5.1.2 *Filter Support*—Use a support base for the filter that has a porous scintered glass center section about 40 to 43 mm in diameter. The support base is designed to fit securely against the funnel holding the filter in place over the porous section. The filter support's stem should be long enough to extend down into the filter flask such that the end is below the vacuum connection.

5.1.3 *Clamp Assembly*—Use a spring or screw type clamp to secure the funnel to the filter support. The clamp should be tight enough to prevent the solvent from leaking through at the junction between the glass and filter membrane. The exterior dimensions of the funnel and support are designed to facilitate clamping the two pieces together.

5.1.4 *Rubber Stopper*—Use a single-hole, capable of holding the lower stem of the filter support securely onto the filtering flask.

5.1.5 *Vacuum Filtering Flask*—Use a 500 mL or larger vacuum filtering flask.

5.2 *Membrane Filter*—Use a nylon membrane filter, 47 mm in diameter with 0.45-µm pore size.⁶

5.3 *Oven*—Use an oven capable of maintaining a temperature of $105 \pm 2^\circ\text{C}$ ($220 \pm 4^\circ\text{F}$).

5.4 *Vacuum Pump*—Use a vacuum pump capable of reducing and maintaining the pressure at -80 kPa (-24 in. Hg) during the filtering.

5.5 *Analytical Balance*—Use an analytical balance capable of measuring to the nearest 0.0001 g. Verify the balance, at least annually, against weights traceable to a national metrology institute such as the National Institute of Standards and Technology (NIST).

5.6 *Heating Coil for Filter Assembly*—Use copper tubing (3.175 mm or 1/8-in. diameter) wound around the funnel on the filter apparatus and connected to a circulating bath to maintain the oil in the funnel at $90 \pm 2^\circ\text{C}$ (see Fig. 1). Alternative methods of heating the funnel such as heating tape or glass thermal jacket could also be used.

5.7 *Mixer*—Use a nonaerating, high-speed mixer meeting the verification efficiency requirements specified in Practice D 5854 (API MPMS Chapter 8.3). Either insertion mixers or circulating mixers are acceptable provided they meet the criteria in Practice D 5854 (API MPMS Chapter 8.3).

5.8 *Cooling Vessel*—Use a desiccator or other type of tightly covered vessel for cooling the membrane filter before weighing. The use of a desiccant/drying agent is not recommended.

5.9 *Ground/Bond Wire*—Use a 0.912–2.59 mm (No. 10 through No. 19) bare stranded flexible, stainless steel or copper wire installed in the flask through the vacuum connection and connected to ground.

6. Reagents

6.1 *Toluene*—Reagent grade chemicals shall be used in all tests. Unless otherwise indicated, it is intended that all reagents shall conform to the specifications of the Committee on Analytical Reagents of the American Chemical Society, where such specifications are available,⁷ or to Grade 2 of ISO 5272. Other grades may be used, provided it is first ascertained that the reagent's lot or batch is of sufficiently high purity to permit its use without lessening the accuracy of the determination. (**Warning**—Flammable. Keep away from heat, sparks and open flame. Vapor harmful. Toluene is toxic. Particular care shall be taken to avoid breathing the vapors and to protect the eyes. Keep the container closed. Use with adequate ventilation. Avoid prolonged or repeated contact with the skin.)

7. Sampling, Test Specimens

7.1 *Sampling*, shall include all the steps required to obtain a representative portion of the contents of any pipe, tank, or other system, and to transfer the sample into the laboratory test container. The laboratory test container and sample volume shall be of sufficient dimensions and volume to allow mixing as described in 7.3.1. Mixing is required to properly disperse sediment as well as any water present in the sample.

7.2 *Laboratory Sample*—Use only representative samples obtained as specified in Practice D 4057 (API MPMS Chapter 8.1) or Practice D 4177 (API MPMS Chapter 8.2) for this test method. Analyze samples within two weeks after taking the sample. Retaining samples longer may affect the results.

7.3 *Sample Preparation*—The following sample preparation and handling procedure shall apply.

7.3.1 Mix the test sample of crude oil at room temperature in the original container immediately (within 15 min) before

⁵ The following filtration assembly was used in generating the precision: Millipore Corp., Ashly Rd., Bedford, MA 01730. Other filtration assemblies also may be acceptable.

⁶ The following filter was used in generating the precision: MSI Nylon 60 Membrane Filter from Fisher Scientific, Catalog Number NO-4-SP047-00. Other nylon filters of 0.45-µm porosity also may be acceptable.

⁷ *Reagent Chemicals, American Chemical Society Specifications*, American Chemical Society, Washington, DC. For suggestions on the testing of reagents not listed by the American Chemical Society, see *Analar Standards for Laboratory Chemicals*, BDH Ltd., Poole, Dorset, U.K., and the *United States Pharmacopeia and National Formulary*, U.S. Pharmacopeial Convention, Inc. (USPC), Rockville, MD.

analysis to ensure complete homogeneity. A test sample drawn directly from a large volume dynamic mixing system shall be analyzed within 15 min or else remix as follows:

NOTE 2—Analysis should follow mixing as soon as possible. The 15-min interval mentioned above is a general guideline which may not apply to all crudes, especially some light crudes which do not hold water and sediment in suspension for even this short a time.

7.3.2 Mixing of the sample should not increase the temperature of the sample more than 10°C (20°F), or a loss of water may occur affecting the sample's composition. The type of mixer depends on the quantity of crude. Before any unknown mixer is used, the specifications for the homogenization test, Practice D 5854 (API MPMS Chapter 8.3), must be met. The mixer must be re-evaluated following any changes in the type of crude, quantity of crude, or shape of the sample container.

7.3.3 For small test sample volumes, 50 to 300 mL, a nonaerating, high-speed, shear mixer is required. Use the mixing time, mixing speed, and height above the bottom of the container found to be satisfactory in Practice D 5854 (API MPMS Chapter 8.3). Clean and dry the mixer between samples.

8. Procedure

8.1 *Filter Preparation*—Prepare nylon filters by heating in an oven at 105 ± 2°C (220 ± 4°F) for 15 min. Cool and store the dried filters in a cooling vessel (desiccator without desiccant) until needed. Use only new filters.

8.2 Weigh the filter immediately before use to the nearest 0.0001 g.

8.3 Using tweezers, place the membrane filter on the center of the filter support, which is mounted on the filtering flask with a rubber stopper. Attach the funnel to the filter support and clamp it securely.

8.4 Connect the heating coil to the circulating bath and place the coil around the lower part of the funnel. Set the temperature of the circulating bath so as to maintain the oil in the funnel at 90 ± 2°C (195 ± 4°F).

NOTE 3—Care should be taken not to overheat the funnel so as to cause evaporation of the toluene and glazing of the filter.

8.5 *Sample Addition*—Into a 200-mL beaker, weigh 10 g of a thoroughly mixed sample (see Section 7) to the nearest 0.0001 g. Add 100 mL of toluene to the beaker and heat the mixture with stirring to 90 ± 2°C (195 ± 4°F). Maintain the temperature at 90 ± 2°C (195 ± 4°F) for about 15 min to dissolve any wax in the crude.

8.6 Start the vacuum pump and adjust the vacuum to -80 kPa (-24 in. Hg). Carefully pour the sample mixture into the filter funnel in three portions. Generally the sample should filter in 10 to 15 min. If the nature of the crude (for example, heavy versus light gravity or high versus low viscosity) or the amount of sediment causes the filtration to proceed extremely slowly (for example, filtering times greater than 30 min), reduce the sample size to 5 g or less and repeat the test. Keep the volume of toluene at 100 mL.

NOTE 4—If the filtration of a given crude typically takes less than

10 min and the sample stays at 90 ± 2°C (195 ± 4°F) during this time, then external heating of the filter funnel may not be necessary.

8.7 *Filter Washing*—Before the last portion of sample has completely filtered, wash the funnel and filter with 50 mL of hot toluene (90°C, 195°F) until no oil is visible on the filter. With the vacuum on, leave the filter on the apparatus for 2 min.

8.8 *Apparatus Disassembly*—Disassemble the filter apparatus by removing the clamp and funnel. Inspect the condition of the filter. If the filter has been properly mounted, it may not be necessary to wash the edges after disassembly. However, if upon removing the funnel dark spots are observed around the edge of the filter further washing is necessary. With the vacuum on, use a dropper to wash the filter's edges with hot toluene (90°C, 195°F).

8.9 If the filter is completely or partially covered with black or dark brown crude oil residue after the washing step above, then discard the filter and repeat the test with a smaller sample size.

NOTE 5—Normally the color of the sediment on the filter is gray or light tan. A black or deep brown colored deposit on the filter is indicative of incomplete washing.

8.10 If the appearance of the filter is acceptable (as in 8.9) then carefully remove it and place it in an oven at 105°C (220°F) for 15 min. Cool in the cooling vessel to room temperature (5 to 10 min) and reweigh to the nearest 0.0001 g.

9. Calculation

9.1 Calculate the mass percent of sediment as follows:

$$S = \frac{m_2 - m_1}{m_s} \times 100 \quad (1)$$

where:

S = sediment content of the sample as a percentage by mass,

m_1 = mass of the filter, g,

m_2 = mass of the filter with the sediment, g, and

m_s = mass of the sample, g.

10. Report

10.1 Report results to the nearest 0.001 % as the mass percent of sediment by membrane filtration. The test report shall reference this Test Method D 4807 (API MPMS Chapter 10.8) as the procedure used.

NOTE 6—Since water and sediment values are commonly reported as volume percent, calculate the volume of the sediment as a percentage of the original sample. As a major portion of the sediment probably would be sand (silicon dioxide, which has a density of 2.32) and a small amount of other naturally occurring materials (with a relative density lower than that of sand), use an arbitrary density of 2.0 for the resulting sediment. Then, to obtain volume percent sediment, divide the mass percent sediment by 2.0 and multiply by the relative density of the crude oil. (Note that this calculation is provided for convenience only, and the precision and bias for this standard are based on mass percent sediment and not on volume percent of sediment.)

$$S_v = \frac{S}{2.0} \times \text{relative density of the oil} \quad (2)$$

TABLE 1 Precision Intervals

Mass Sediment	Repeatability	Reproducibility
0.0050	0.0031	0.0083
0.0100	0.0044	0.0118
0.0150	0.0054	0.0144
0.0200	0.0062	0.0166
0.0250	0.0069	0.0186
0.0300	0.0076	0.0204
0.0350	0.0082	0.0220
0.0400	0.0088	0.0235
0.0450	0.0093	0.0249
0.0500	0.0098	0.0263
0.0600	0.0107	0.0288
0.0700	0.0116	0.0311
0.0800	0.0124	0.0333
0.0900	0.0132	0.0353
0.1000	0.0139	0.0372
0.1250	0.0155	0.0416
0.1500	0.0170	0.0455

where:

S_V = the sediment content of the sample as a percentage by volume, and

S = the sediment content of the sample as a percentage by mass.

10.2 Report that the sample mixing procedure was performed in accordance with the procedures specified in Practice D 5854 (API MPMS Chapter 8.3). Report the temperature of the sample before and after mixing.

10.3 The test report shall also contain all details necessary for complete identification of the product tested; any deviation, by agreement or otherwise, from the procedure specified; and the date of the test.

11. Precision and Bias

11.1 *Repeatability*—The difference between successive test results, obtained by the same operator with the same apparatus under constant operating conditions on identical test material, would in the long run, in the normal and correct operation of the test method, exceed the following values in only one case in twenty (see Table 1).

$$0.04388(X^{1/2}) \quad (3)$$

where:

X = sample mean in mass percent.

11.2 *Reproducibility*—The difference between two single and independent test results obtained by different operators working in different laboratories on identical test material would, in the long run, in the normal and correct operation of the test method, exceed the following values only in one case in twenty (see Table 1).

$$0.1176(X^{1/2}) \quad (4)$$

where:

X = sample mean in mass percent.

11.3 *Bias*—The data generated during the development of this test method showed that more sediment is reported for crude oil using this test method compared to the results of Test Method D 473 (API MPMS Chapter 10.1).

12. Keywords

12.1 crude oil; membrane filtration; sediment

ANNEX

(Mandatory Information)

A1. SAFETY PRECAUTIONS TO AVOID STATIC DISCHARGE

A1.1 In Guide D 4865 it is noted that micro-filters are prolific generators of electrostatic charge. This is particularly true in the case of membrane filters used in this procedure.

A1.1.1 The flow of crude oil through the membrane in performing this type of test causes charges to separate due to the presence of ionic impurities or additives in the crude oil. Charges of one polarity are carried with the moving oil while the opposite charges accumulate within the membrane and its holder. The surface charges seek a path to ground.

A1.2 The rate at which these charges recombine depends on the conductivity of the oil. Relaxation time could be of the order of 10-100 s with low conductivity oil. In membrane filtration, very little time is available for charge recombination due to high velocities through the membrane. As a consequence even high conductivity oils may cause charges to accumulate in the membrane holder and receiver and develop

significant voltage differences between the oil and apparatus. Using a glass receiving flask and placing a grounding wire in the receiver will minimize the development of voltage in the fuel.

A1.3 Although grounding the apparatus will not prevent charge separation or accumulation of charges in the oil, it is necessary to bond all parts of the filtration apparatus together and provide a grounding wire. It is essential that no unbonded metal components are present during filtration since they concentrate charge and develop voltage sufficient to cause static discharge within the apparatus.

A1.4 To verify that bonding of all parts of the filtration apparatus is complete the method requires that an electrical conductivity test be conducted using a multimeter. There must be 10 Ω or less resistance between any two points.

SUMMARY OF CHANGES

Subcommittee D02.02 has identified the location of selected changes to this standard since the last issue (D 4807–88(1999)) that may impact the use of this standard.

- (1) Corrected the requirements for the vacuum pump to –80 kPa (–24 in. Hg).
- (2) Added the requirement to verify the analytical balance at least annually.
- (3) Added a cooling vessel to the apparatus and time to cool back to room temperature—5 to 10 min.
- (4) Added ground/bond wire to the apparatus to dissipate static charge.
- (5) Added **Note 6** to allow conversion of mass percent of sediment to volume percent of sediment.
- (6) Deleted original **Annex A1**, Homogenization Efficiency of Unknown Mixers since this is now part of Practice **D 5854** (API **MPMS Chapter 8.3**) which is referenced.
- (7) Added **Annex A1**, Safety Precautions to Avoid Static Discharge.



American Petroleum Institute

2005 Publications Order Form

Effective January 1, 2005.

API Members receive a 30% discount where applicable.

The member discount does not apply to purchases made for the purpose of resale or for incorporation into commercial products, training courses, workshops, or other commercial enterprises.

Available through Global Engineering Documents:

Phone Orders: 1-800-854-7179 (Toll-free in the U.S. and Canada)
303-397-7956 (Local and International)

Fax Orders: 303-397-2740

Online Orders: www.global.ihs.com

Date: _____

☐ **API Member** (Check if Yes)

Invoice To (☐ Check here if same as "Ship To")

Name: _____

Title: _____

Company: _____

Department: _____

Address: _____

City: _____ State/Province: _____

Zip/Postal Code: _____ Country: _____

Telephone: _____

Fax: _____

E-Mail: _____

Ship To (UPS will not deliver to a P.O. Box)

Name: _____

Title: _____

Company: _____

Department: _____

Address: _____

City: _____ State/Province: _____

Zip/Postal Code: _____ Country: _____

Telephone: _____

Fax: _____

E-Mail: _____

Quantity	Product Number	Title	SO★	Unit Price	Total
	H10012	Ch 10.1, Standard Test Method for Sediment in Crude Oils and Fuel Oils by the Extraction Method		\$37.00	
	H30202	Ch 10.2, Determination of Water in Crude Oil by Distillation		\$60.00	
	H10032	Ch 10.3, Standard Test Method for Water and Sediment in Crude Oil by the Centrifuge Method (Laboratory Procedure)		\$37.00	
	H10042	Ch 10.4, Determination of Water and/or Sediment in Crude Oil by the Centrifuge Method (Field Procedure)		\$60.00	
	H100504	Ch 10.5, Standard Test Method for Water in Petroleum Products and Bituminous Materials by Distillation		\$33.00	
	H100604	Ch 10.6, Standard Test Method for Water and Sediment in Fuel Oils by the Centrifuge Method (Laboratory Procedure)		\$33.00	
	H10077	Ch 10.7, Standard Test Method for Water in Crude Oils by Potentiometric Karl Fisher Titration		\$37.00	
	H10092	Ch 10.9, Standard Test Method for Water in Crude Oils by Coulometric Karl Fisher Titration		\$37.00	

☐ **Payment Enclosed** ☐ **P.O. No.** (Enclose Copy) _____

☐ **Charge My Global Account No.** _____

☐ **VISA** ☐ **MasterCard** ☐ **American Express** ☐ **Diners Club** ☐ **Discover**

Credit Card No.: _____

Print Name (As It Appears on Card): _____

Expiration Date: _____

Signature: _____

Subtotal _____

Applicable Sales Tax (see below) _____

Rush Shipping Fee (see below) _____

Shipping and Handling (see below) _____

Total (in U.S. Dollars) _____

★ To be placed on Standing Order for future editions of this publication, place a check mark in the SO column and sign here:

Pricing and availability subject to change without notice.

Mail Orders – Payment by check or money order in U.S. dollars is required except for established accounts. State and local taxes, \$10 processing fee*, and 5% shipping must be added. Send mail orders to: **API Publications, Global Engineering Documents, 15 Inverness Way East, M/S C303B, Englewood, CO 80112-5776, USA.**

Purchase Orders – Purchase orders are accepted from established accounts. Invoice will include actual freight cost, a \$10 processing fee*, plus state and local taxes.

Telephone Orders – If ordering by telephone, a \$10 processing fee* and actual freight costs will be added to the order.

Sales Tax – All U.S. purchases must include applicable state and local sales tax. Customers claiming tax-exempt status must provide Global with a copy of their exemption certificate. **Shipping** (U.S. Orders) – Orders shipped within the U.S. are sent via traceable means. Most orders are shipped the same day. Subscription updates are sent by First-Class Mail. Other options, including next-day service, air service, and fax transmission are available at additional cost. Call 1-800-854-7179 for more information.

Shipping (International Orders) – Standard international shipping is by air express courier service. Subscription updates are sent by World Mail. Normal delivery is 3-4 days from shipping date.

Rush Shipping Fee – Next Day Delivery orders charge is \$20 in addition to the carrier charges. Next Day Delivery orders must be placed by 2:00 p.m. MST to ensure overnight delivery. **Returns** – All returns must be pre-approved by calling Global's Customer Service Department at 1-800-624-3974 for information and assistance. There may be a 15% restocking fee. Special order items, electronic documents, and age-dated materials are non-returnable.

***Minimum Order** – There is a \$50 minimum for all orders containing hardcopy documents. The \$50 minimum applies to the order subtotal including the \$10 processing fee, excluding any applicable taxes and freight charges. If the total cost of the documents on the order plus the \$10 processing fee is less than \$50, the processing fee will be increased to bring the order amount up to the \$50 minimum. This processing fee will be applied before any applicable deposit account, quantity or member discounts have been applied. There is no minimum for orders containing only electronically delivered documents.

There's more where this came from.

The American Petroleum Institute provides additional resources and programs to the oil and natural gas industry which are based on API® Standards. For more information, contact:

- | | |
|---|--|
| • API Monogram® Licensing Program | Phone: 202-962-4791
Fax: 202-682-8070 |
| • American Petroleum Institute Quality Registrar (APIQR®) | Phone: 202-962-4791
Fax: 202-682-8070 |
| • API Spec Q1® Registration | Phone: 202-962-4791
Fax: 202-682-8070 |
| • API Perforator Design Registration | Phone: 202-962-4791
Fax: 202-682-8070 |
| • API ISO/TS 29001 Registration | Phone: 202-962-4791
Fax: 202-682-8070 |
| • API Training Provider Certification Program | Phone: 202-682-8490
Fax: 202-682-8070 |
| • Individual Certification Programs | Phone: 202-682-8064
Fax: 202-682-8348 |
| • Engine Oil Licensing and Certification System (EOLCS) | Phone: 202-682-8516
Fax: 202-962-4739 |
| • API PetroTEAM™ (Training, Education and Meetings) | Phone: 202-682-8195
Fax: 202-682-8222 |

Check out the API Publications, Programs, and Services Catalog online at www.api.org.



Helping You Get
The Job Done Right.®

Additional copies are available through Global Engineering Documents at (800) 854-7179 or (303) 397-7956

Information about API Publications, Programs and Services is available on the World Wide Web at <http://www.api.org>



1220 L Street, Northwest
Washington, D.C. 20005-4070
202-682-8000

Product No: H100802